


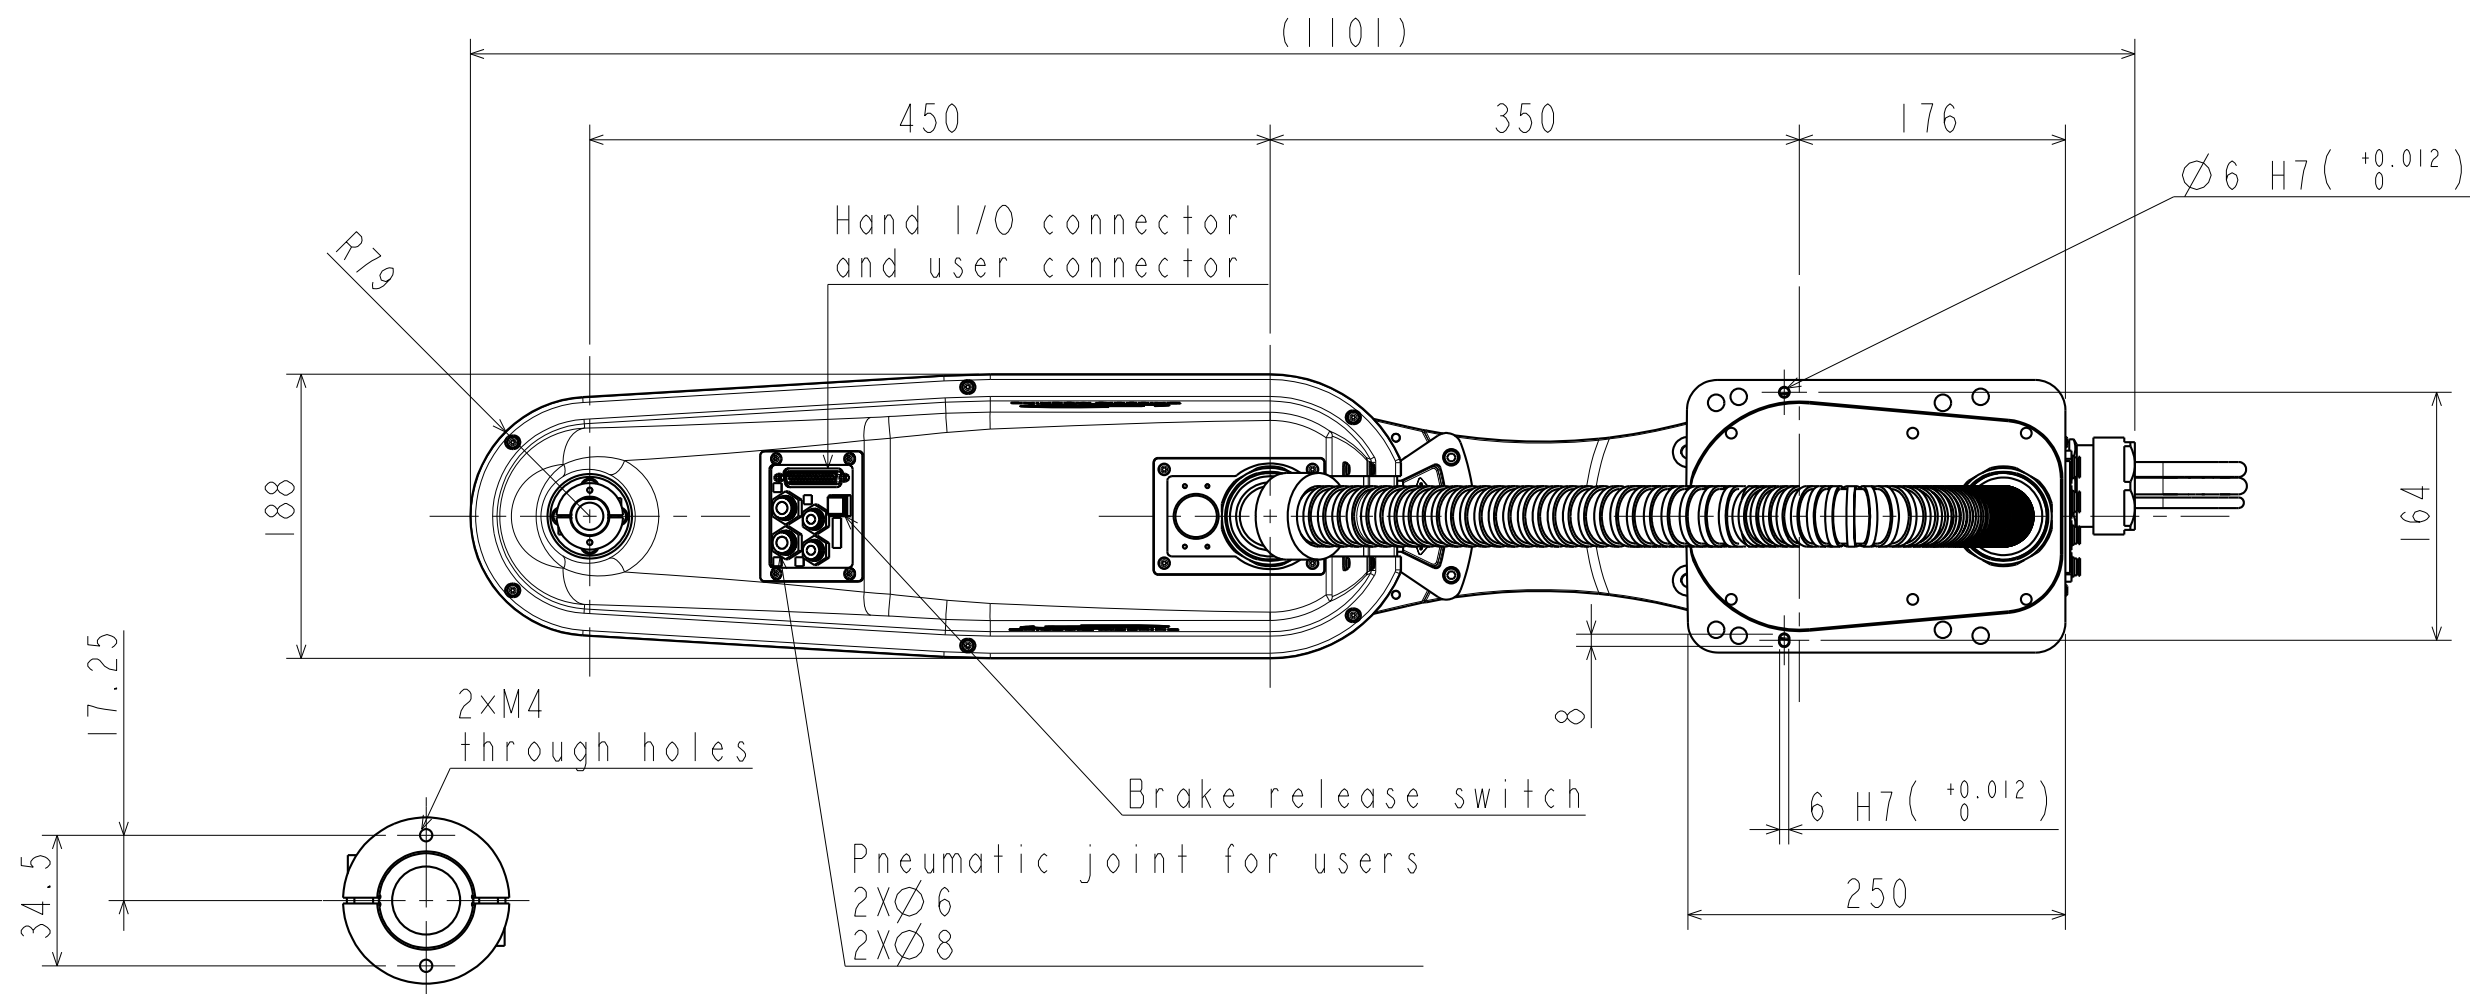


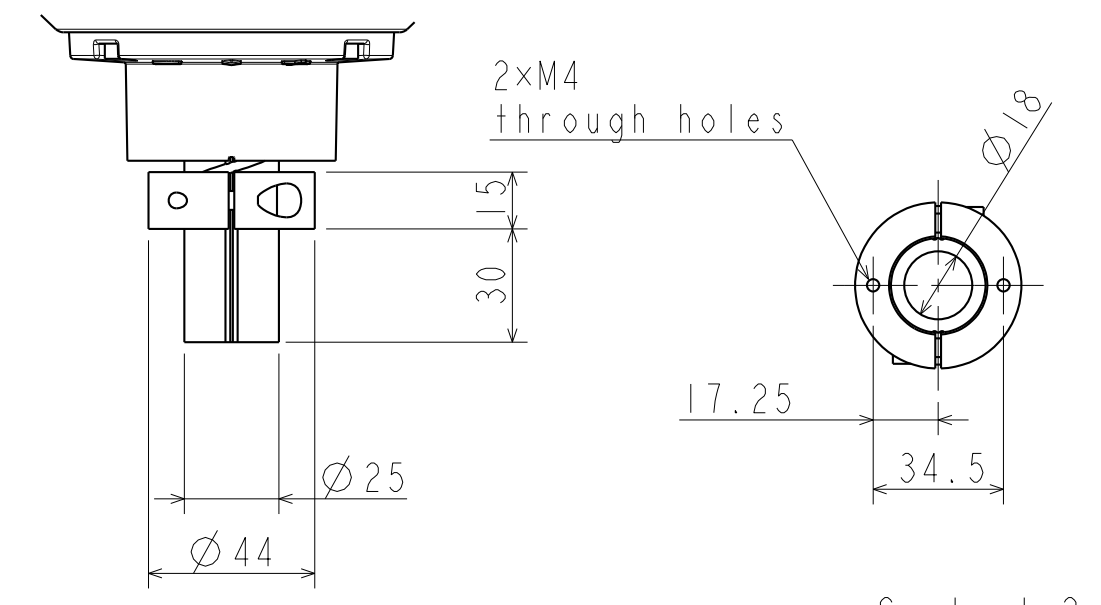


Scale 1:2
Y view

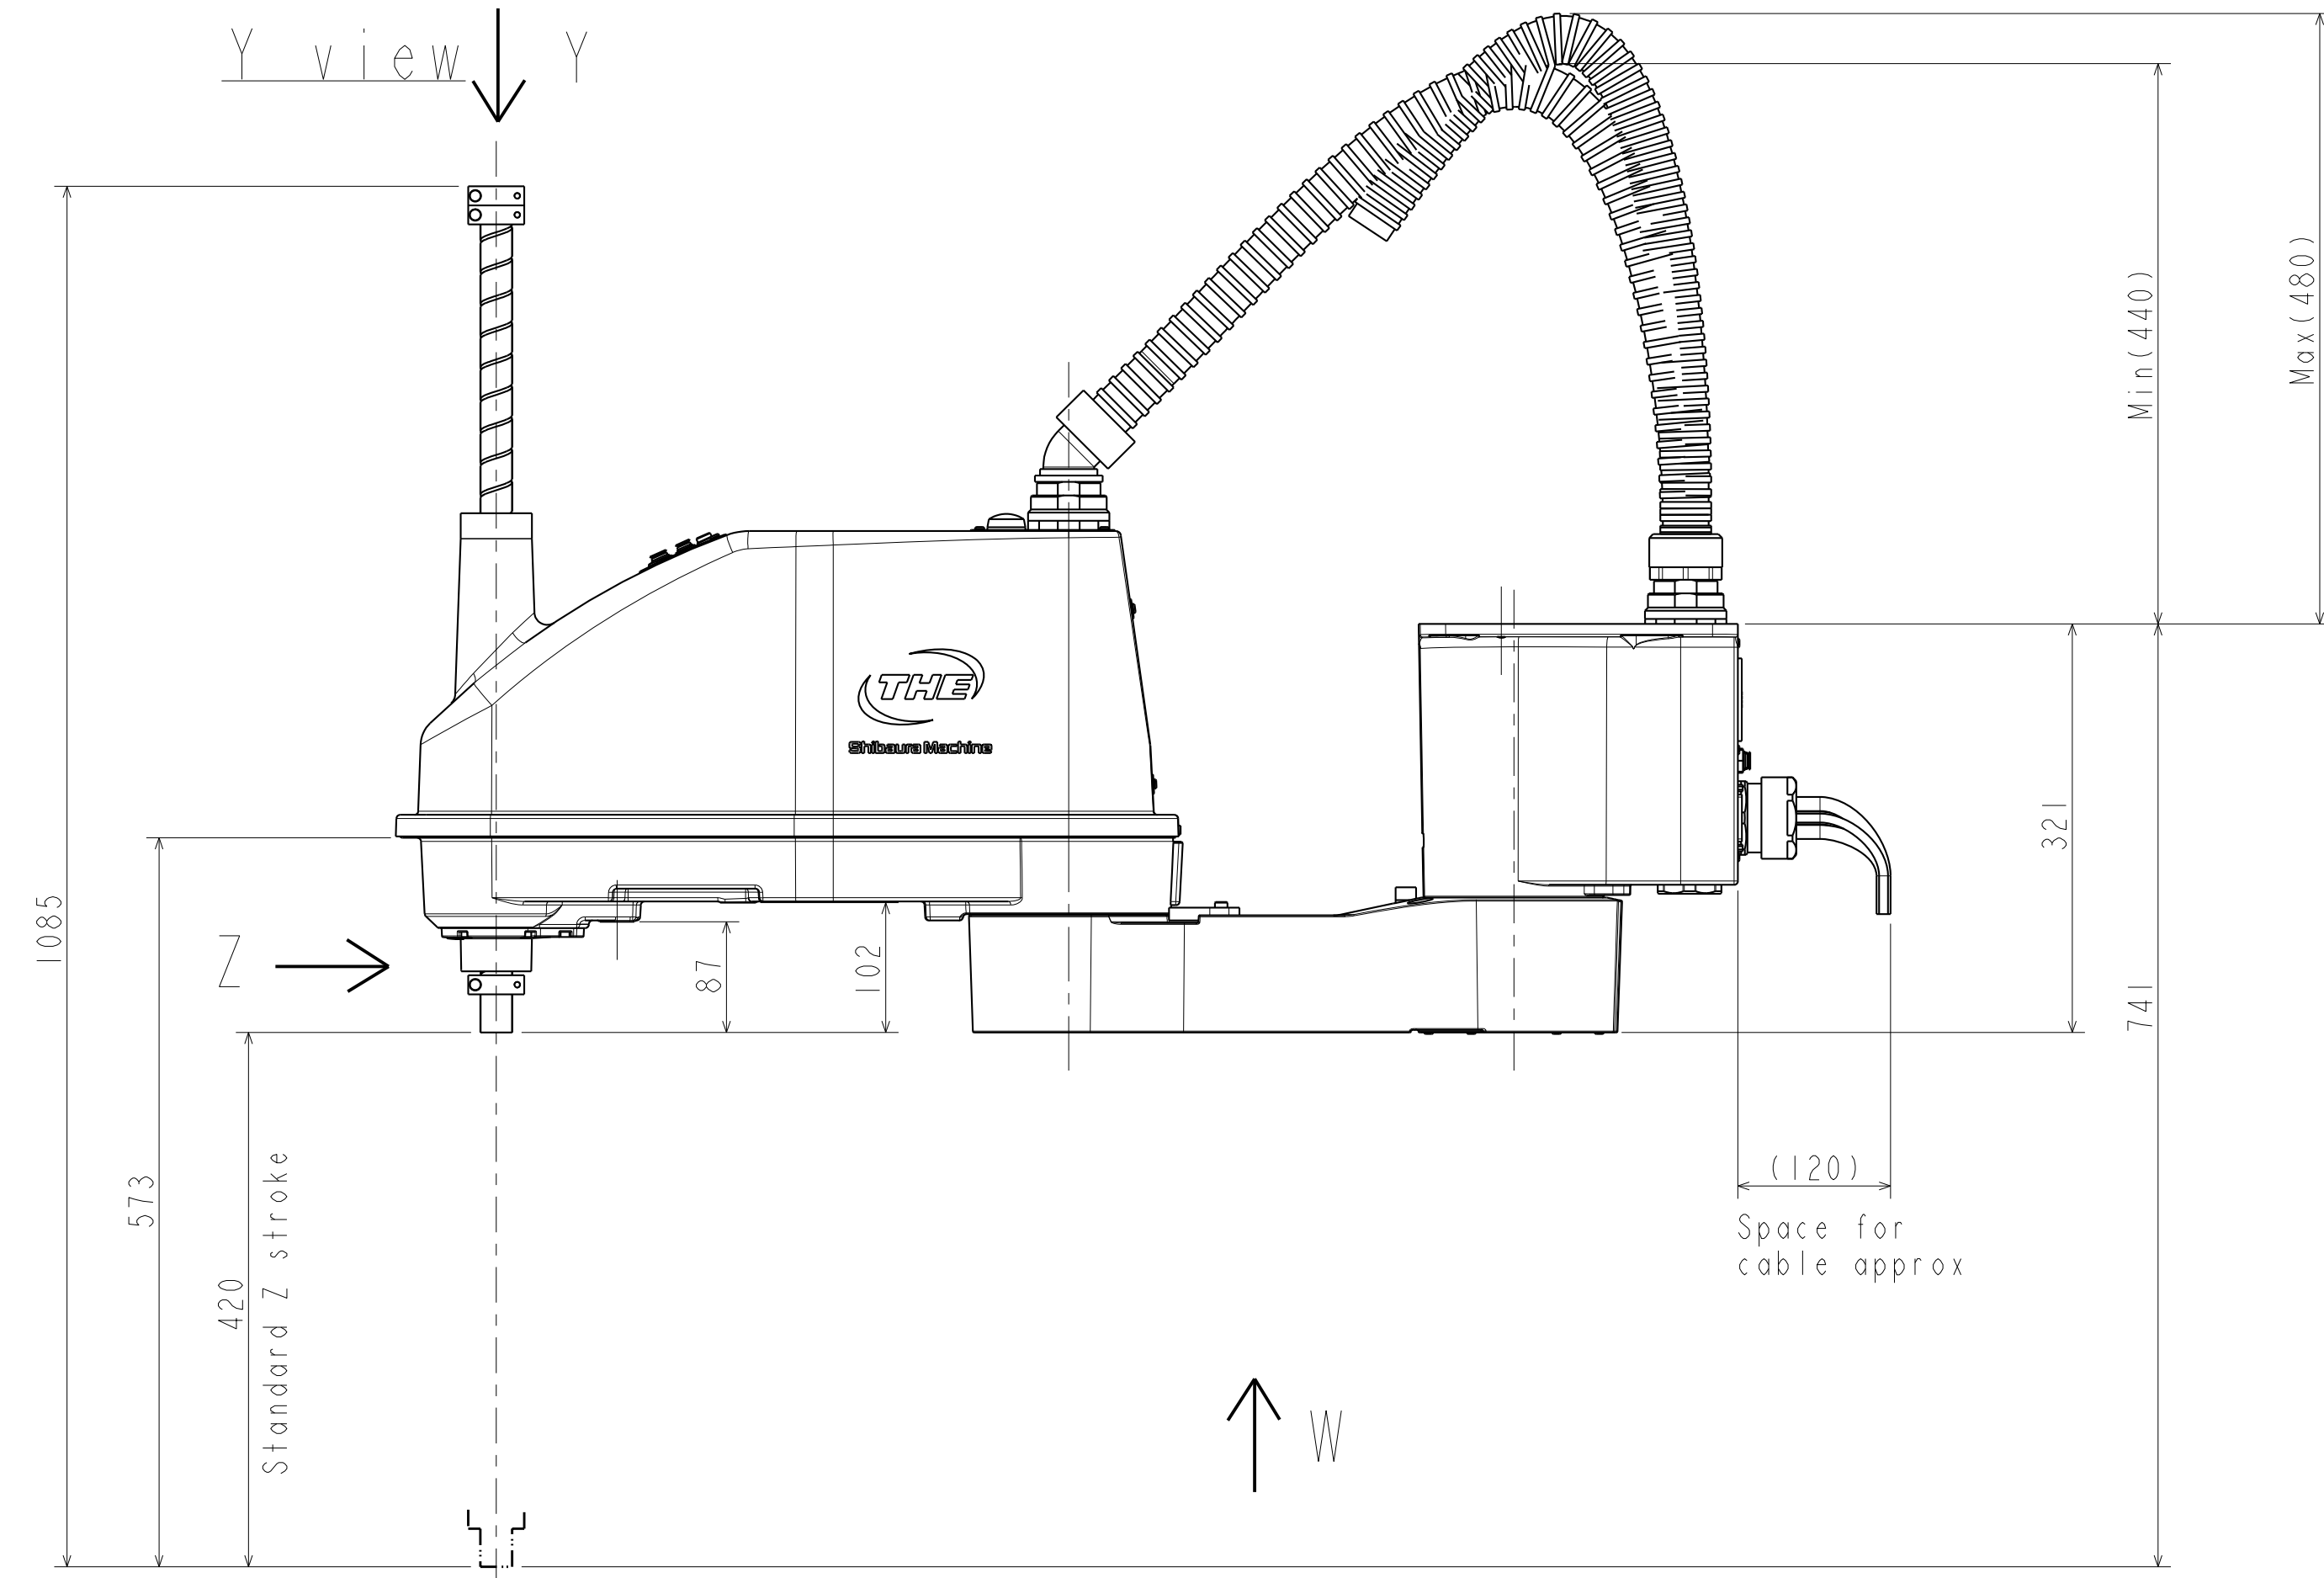


Scale 1:2
X view
Z view Detail
instillation view of hand

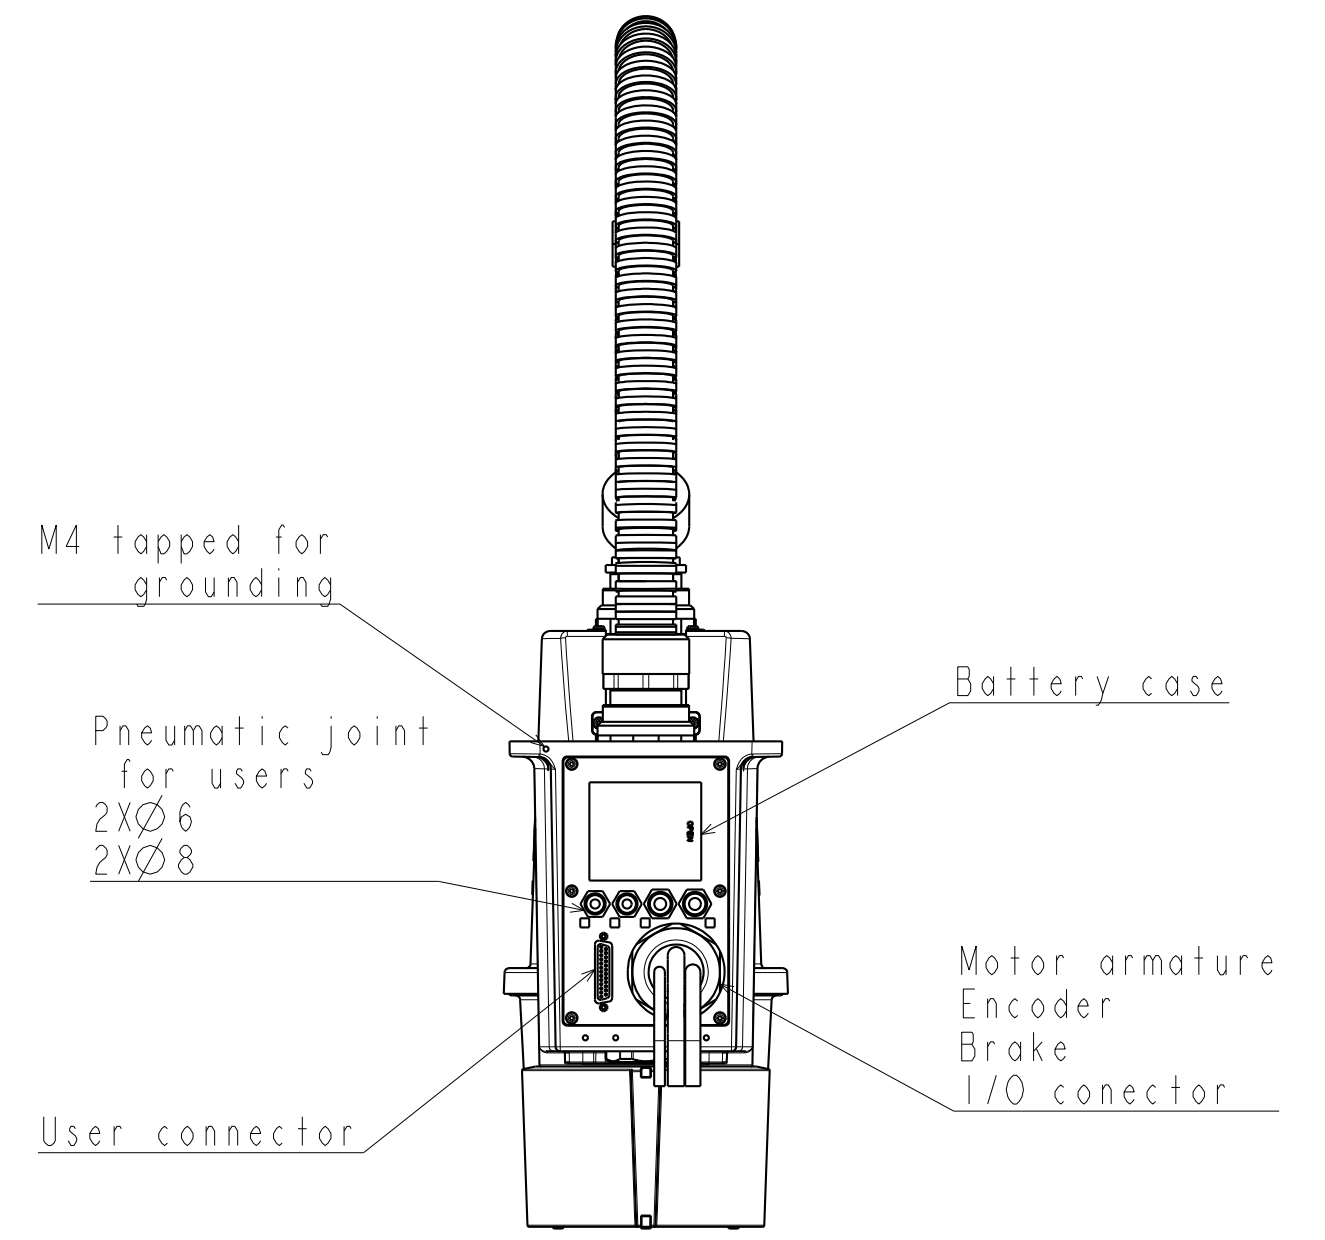

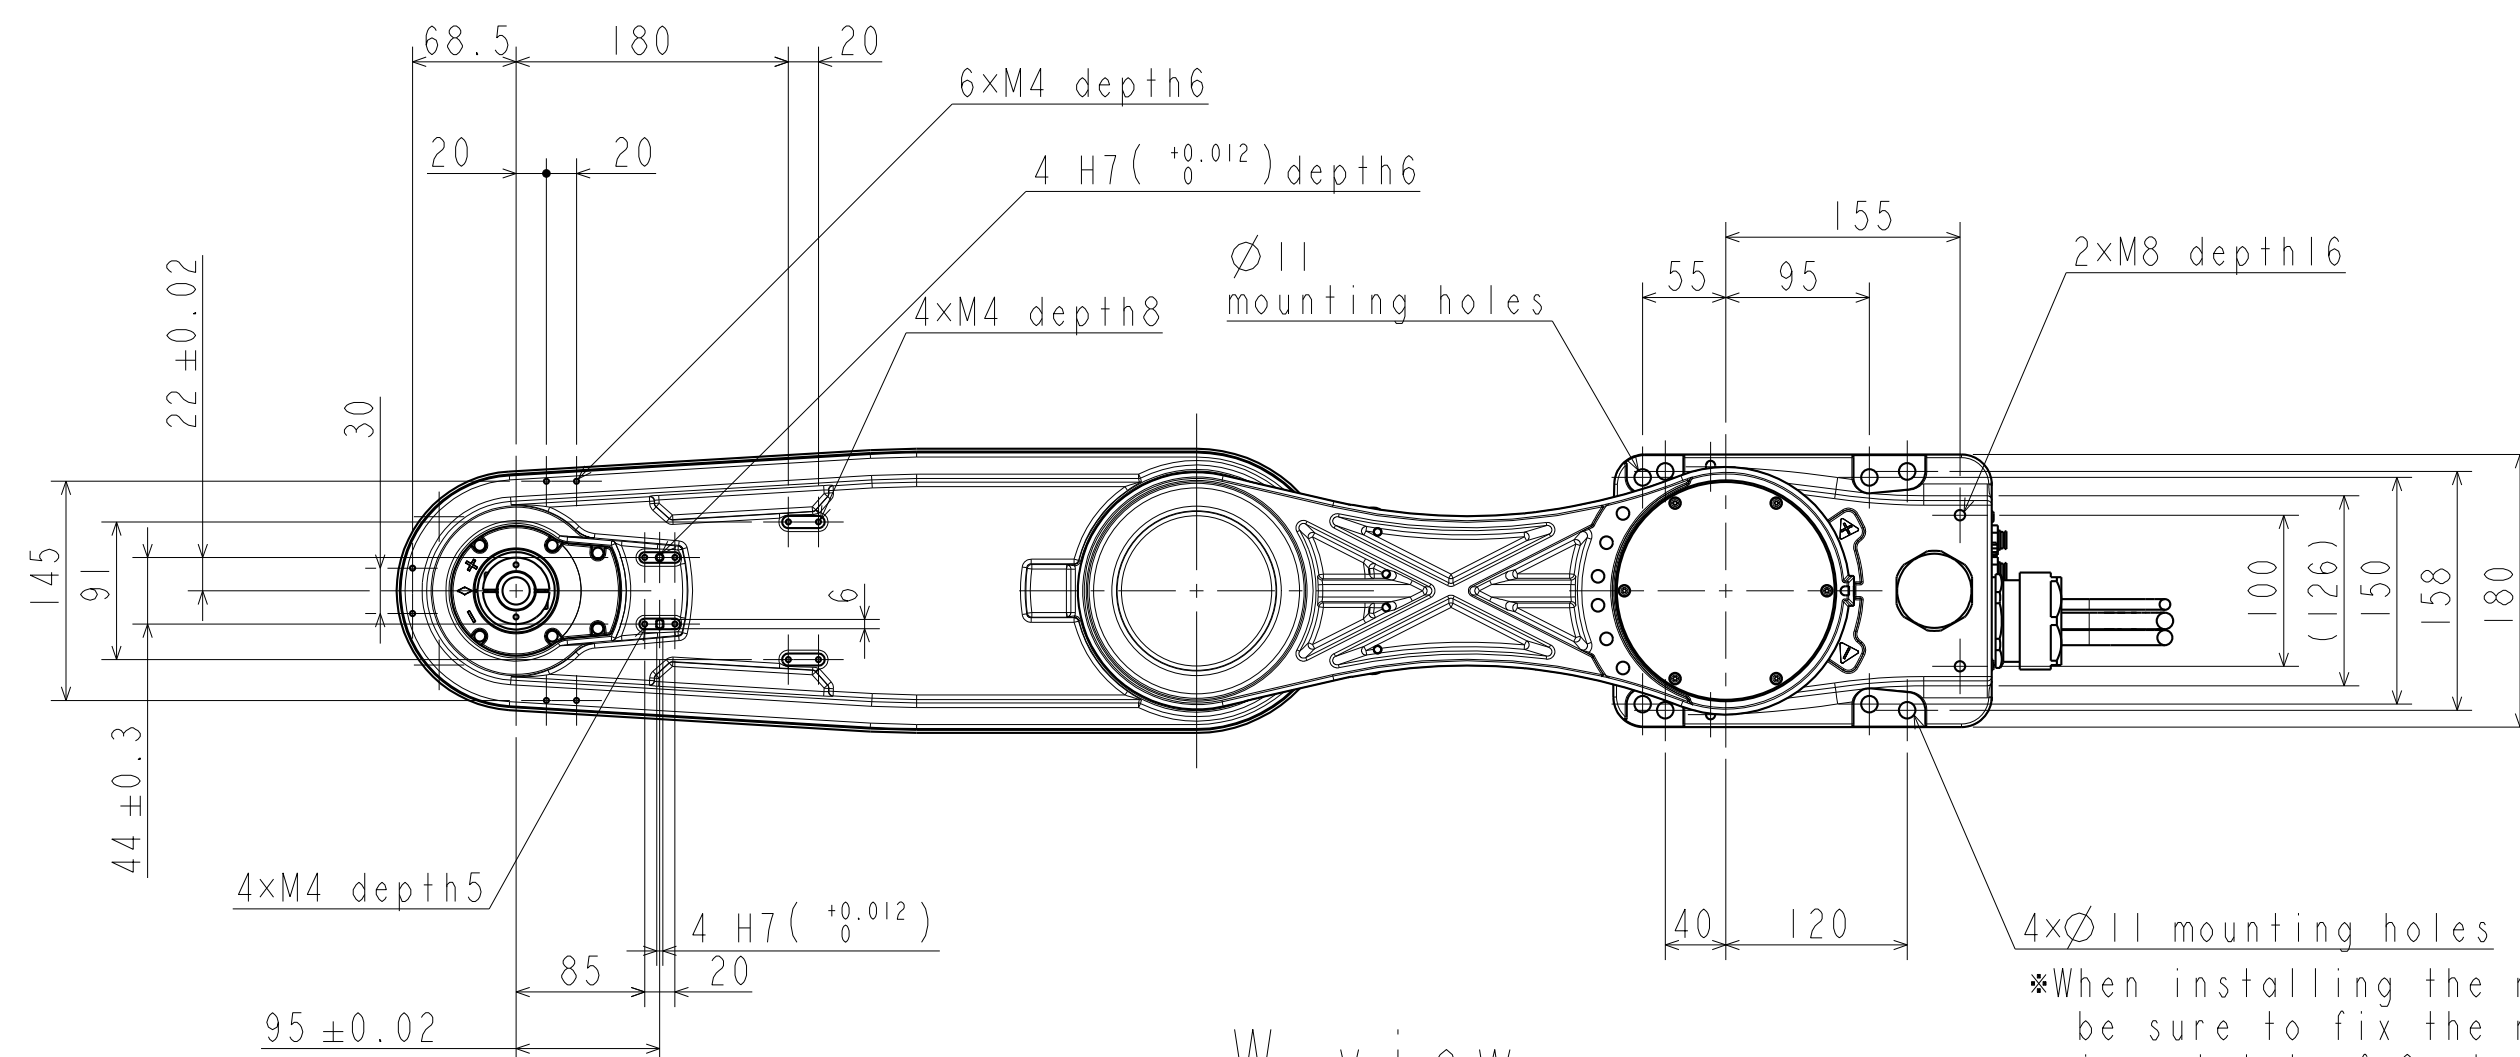


W view

- *When installing the robot, be sure to fix the robot in a total of 6 places, 2 at the front and 4 at the rear.
- *Includes six mounting M10 bolts

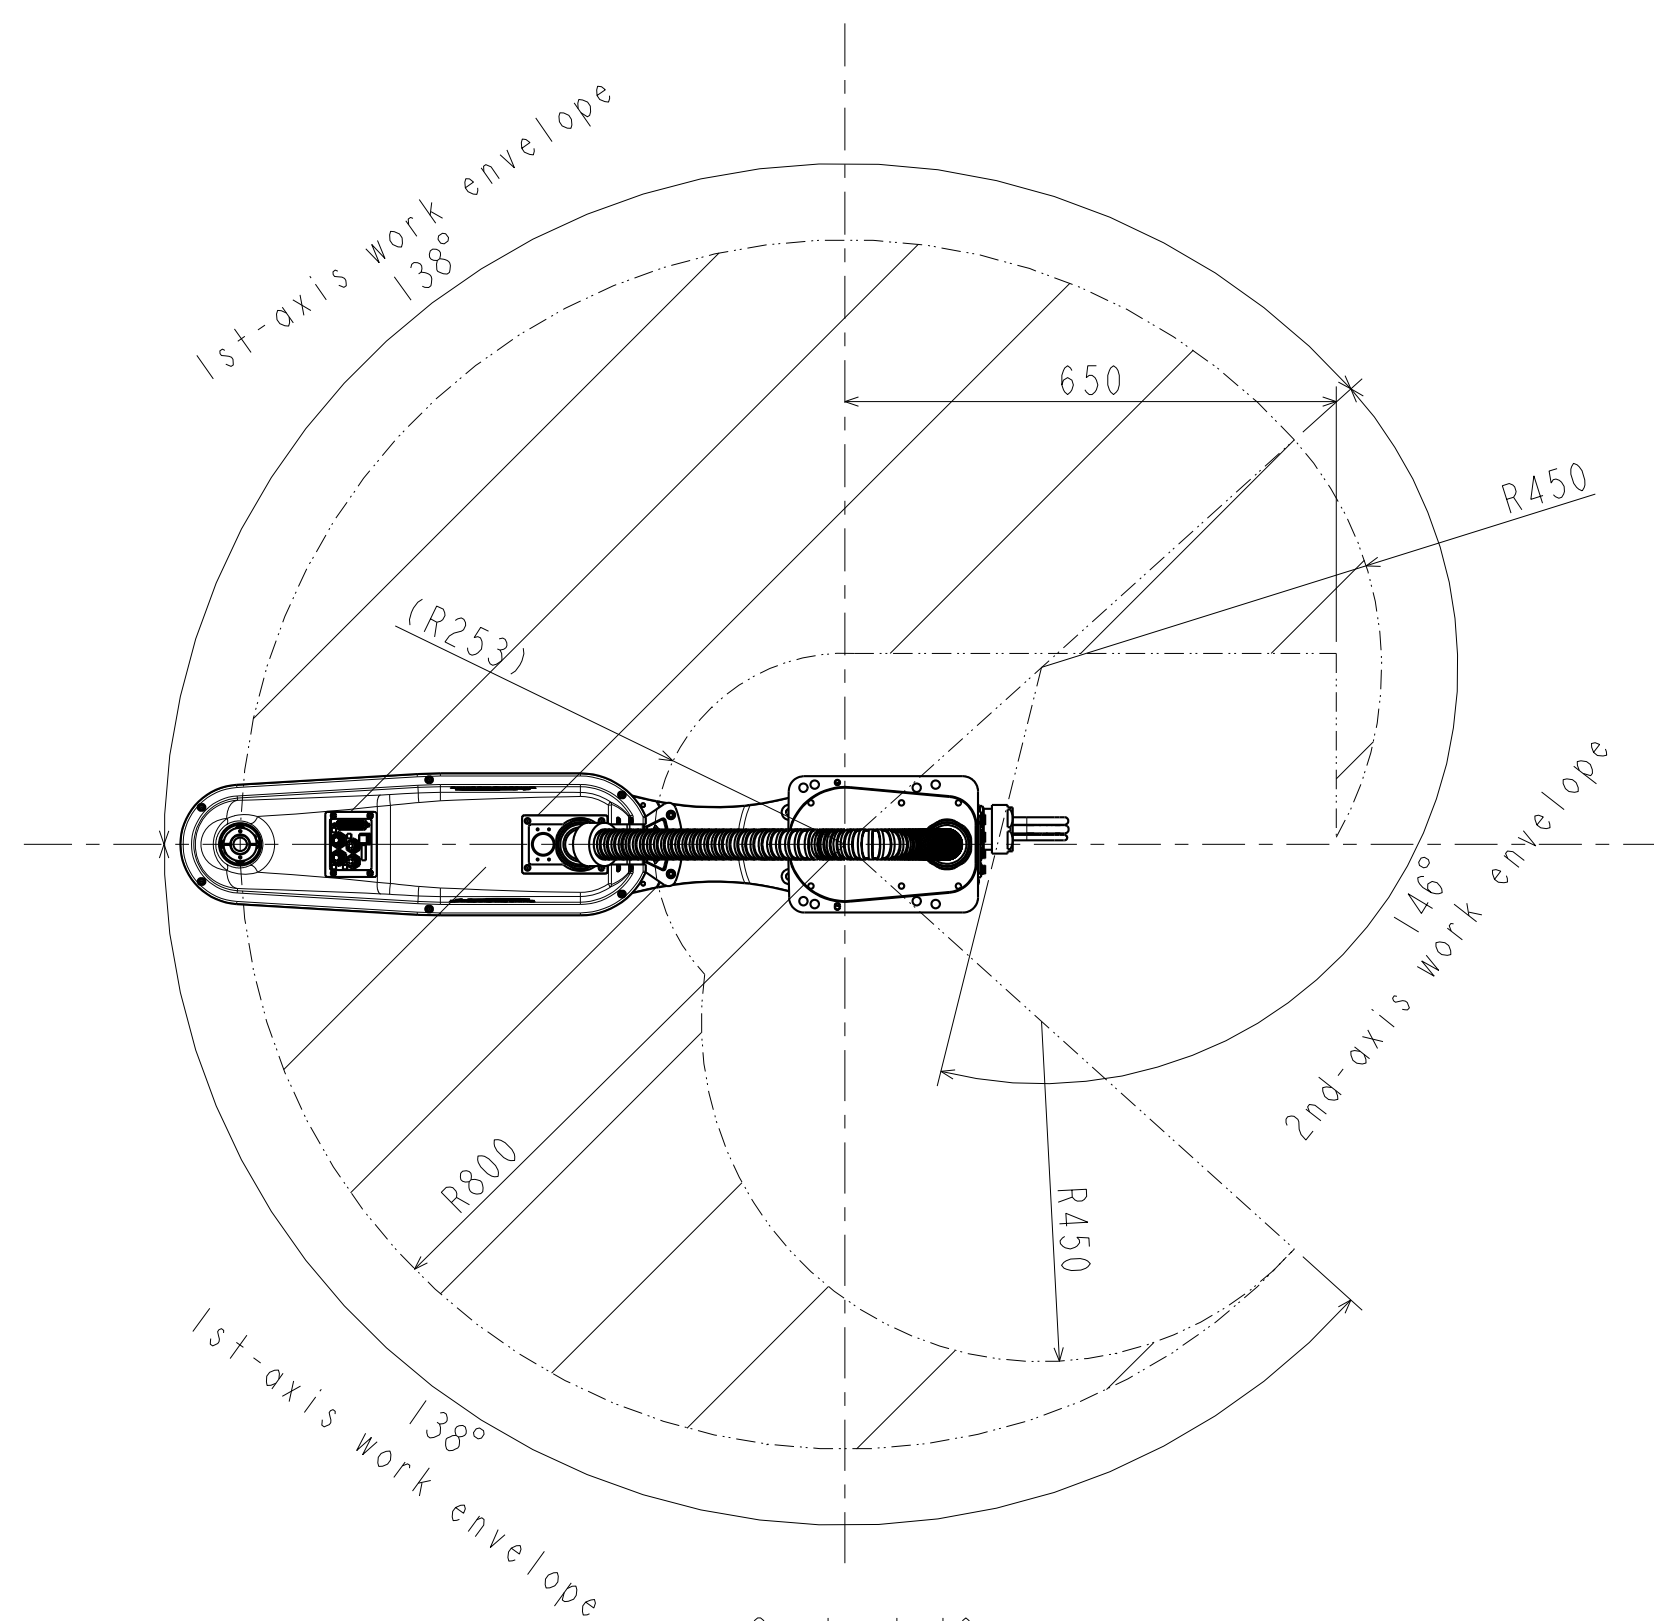

Lefty work envelope

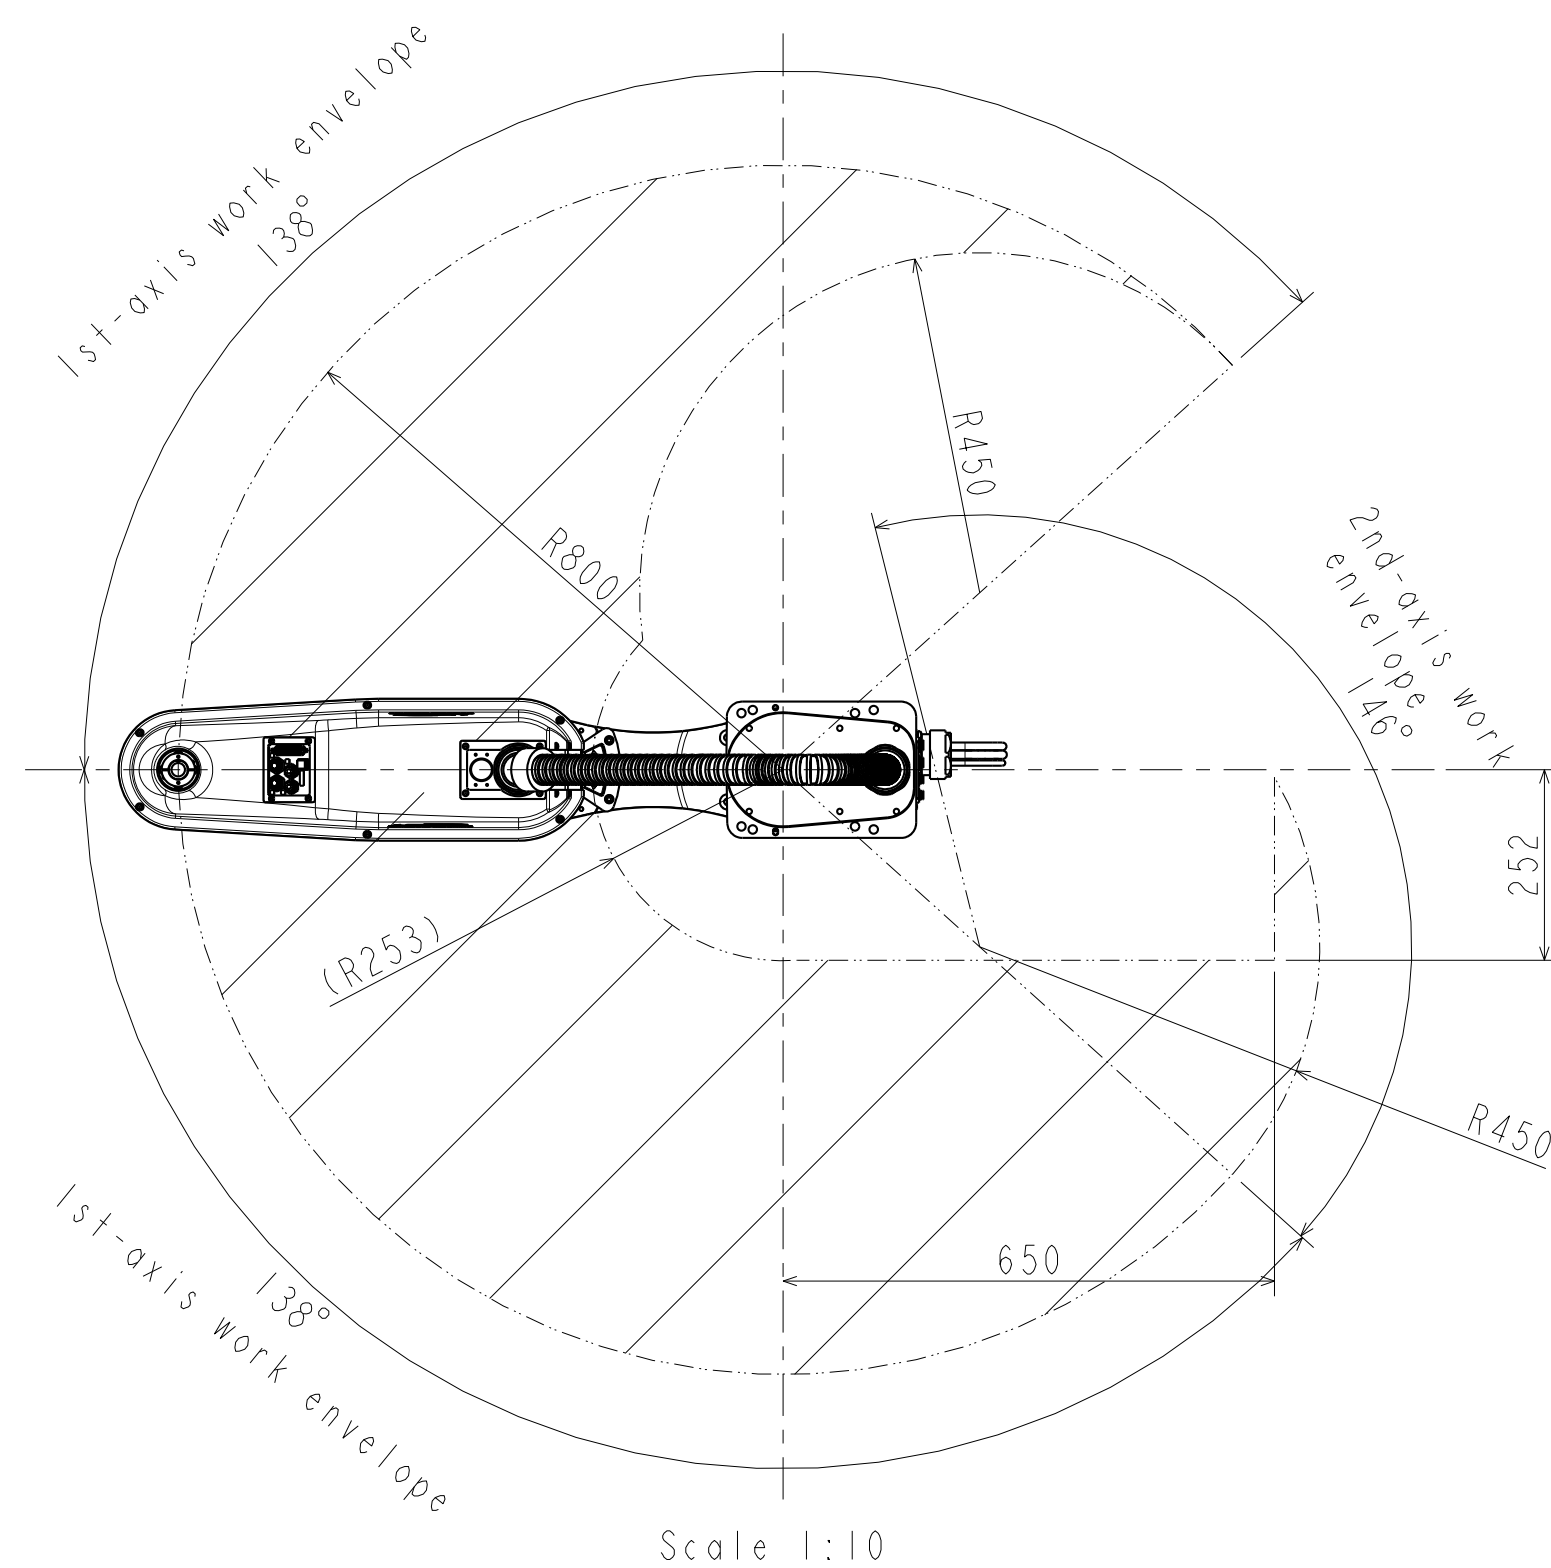

Righty work envelope