


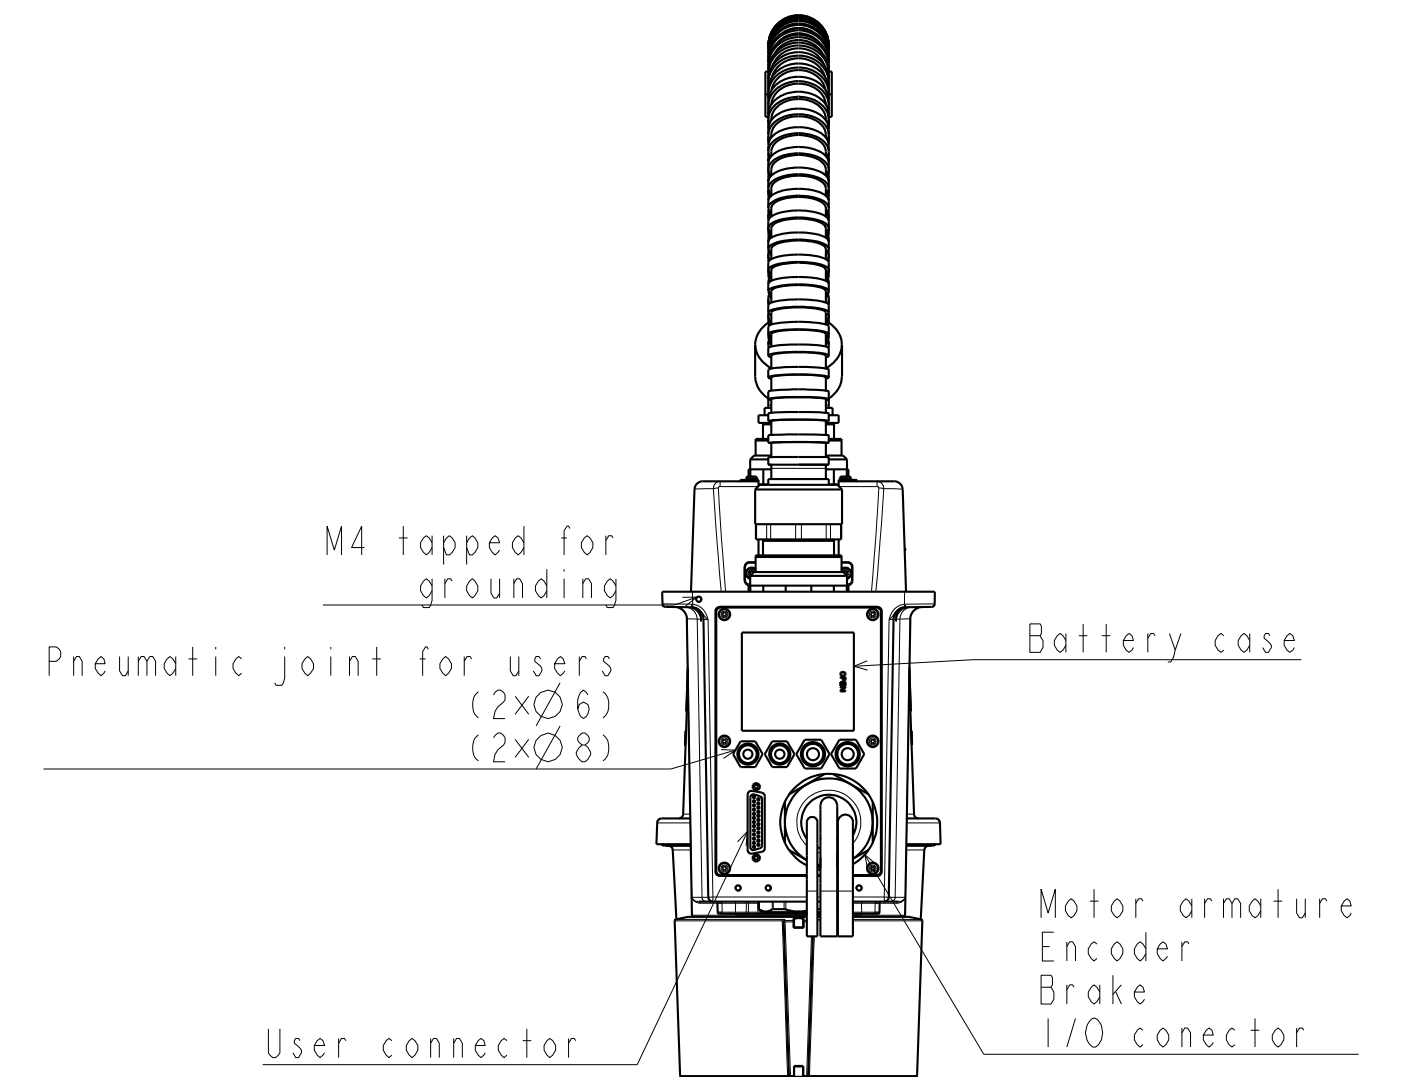
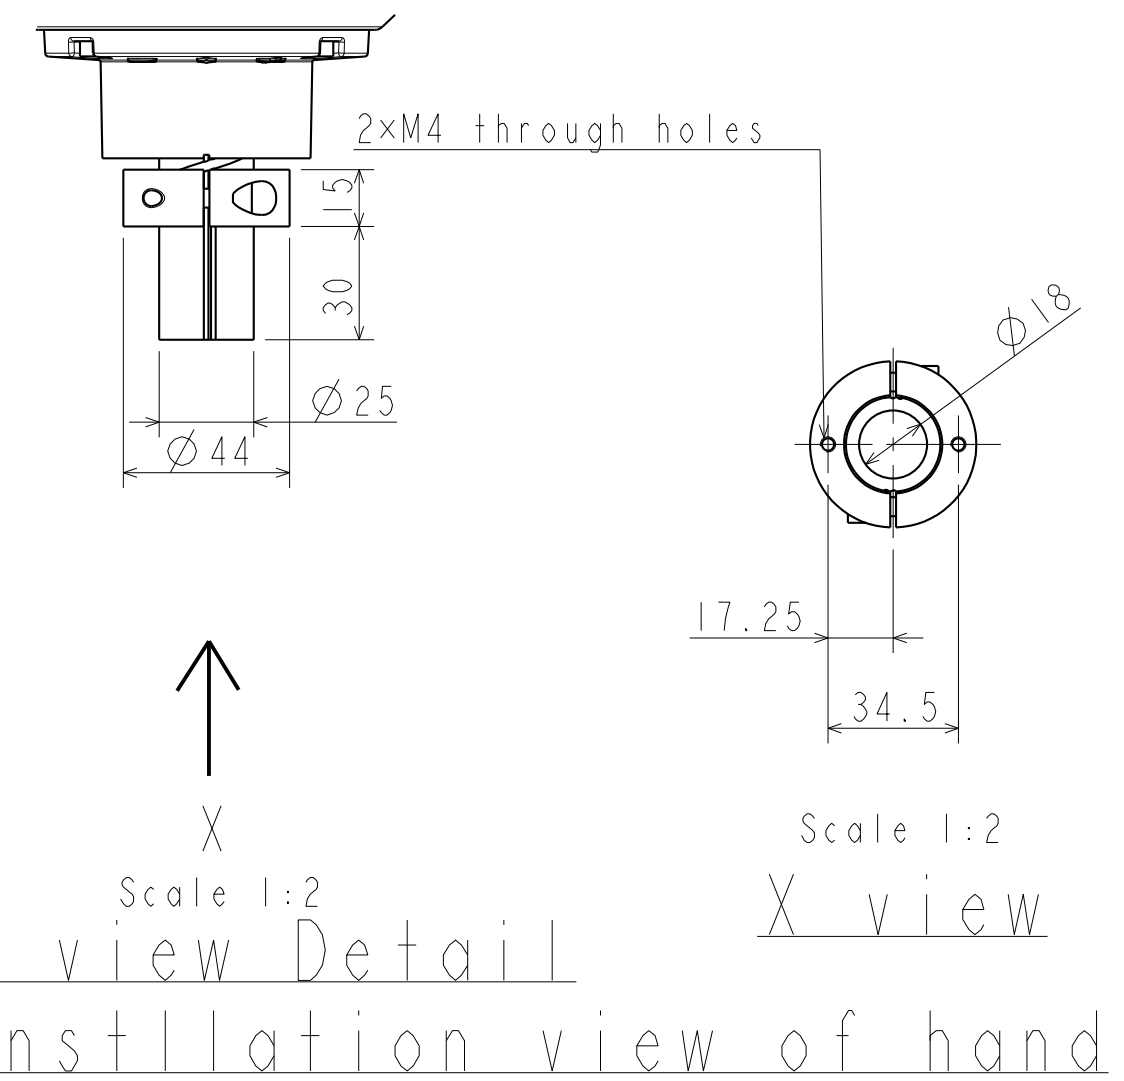
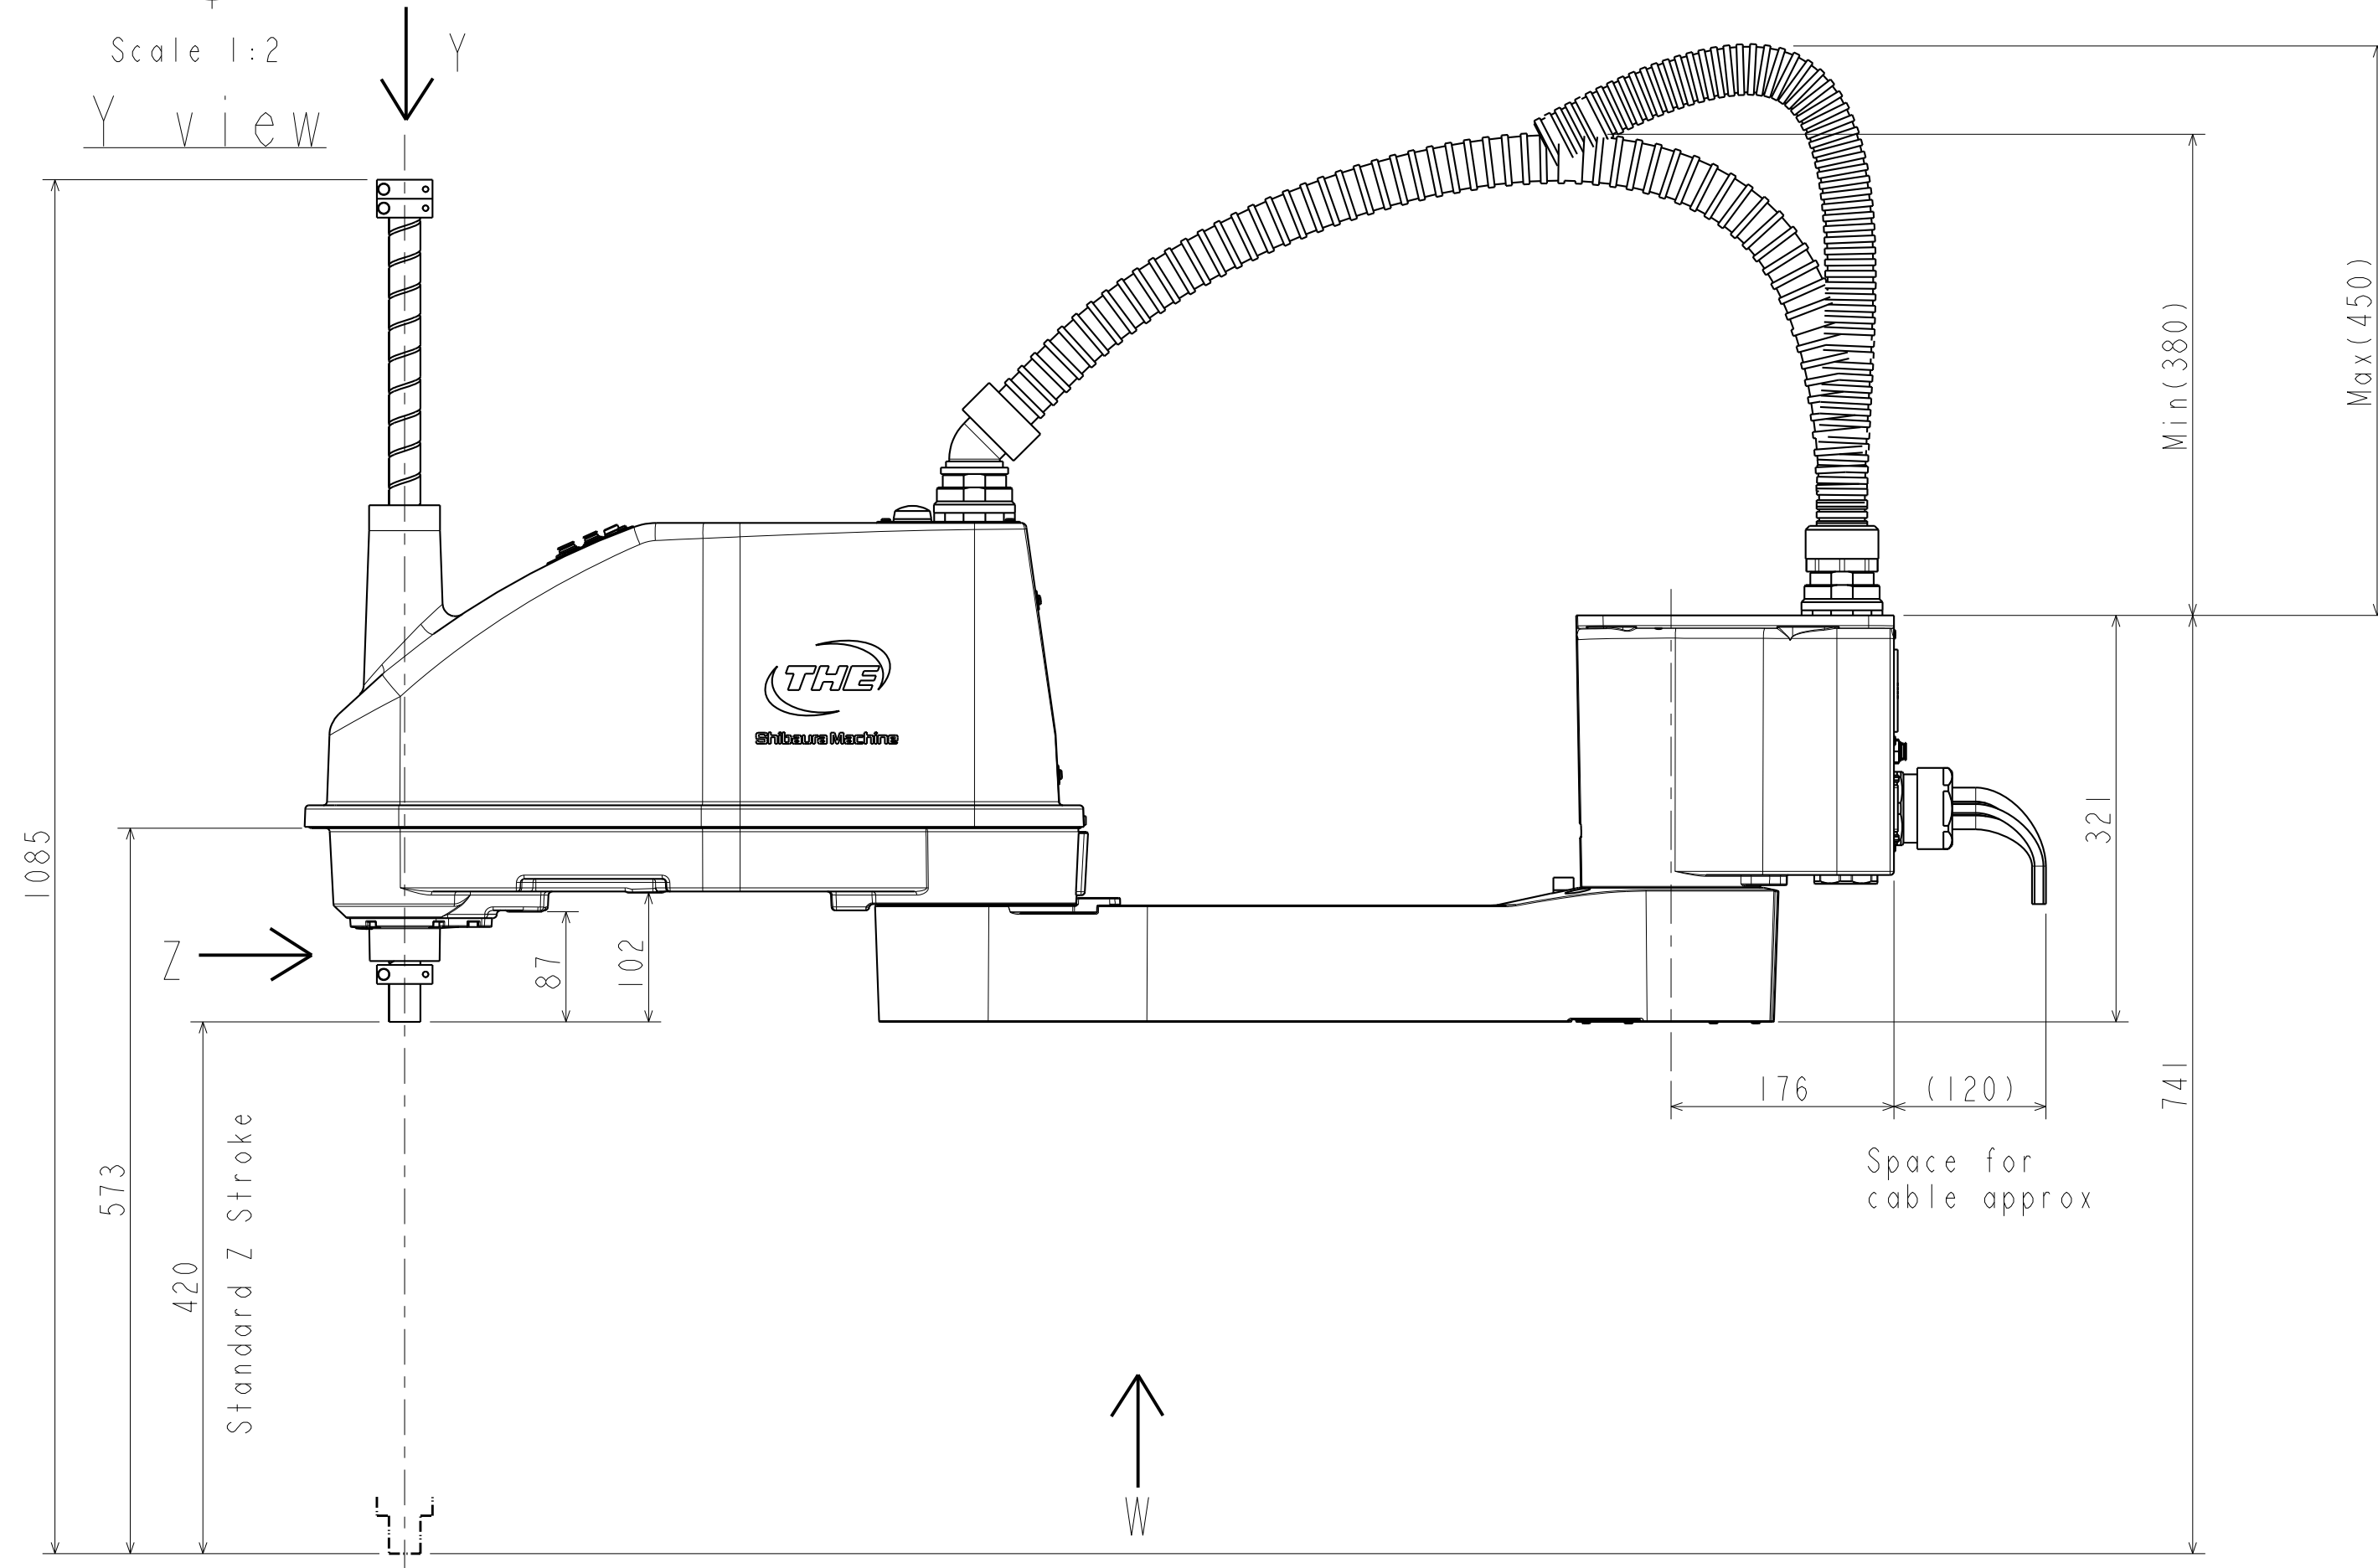


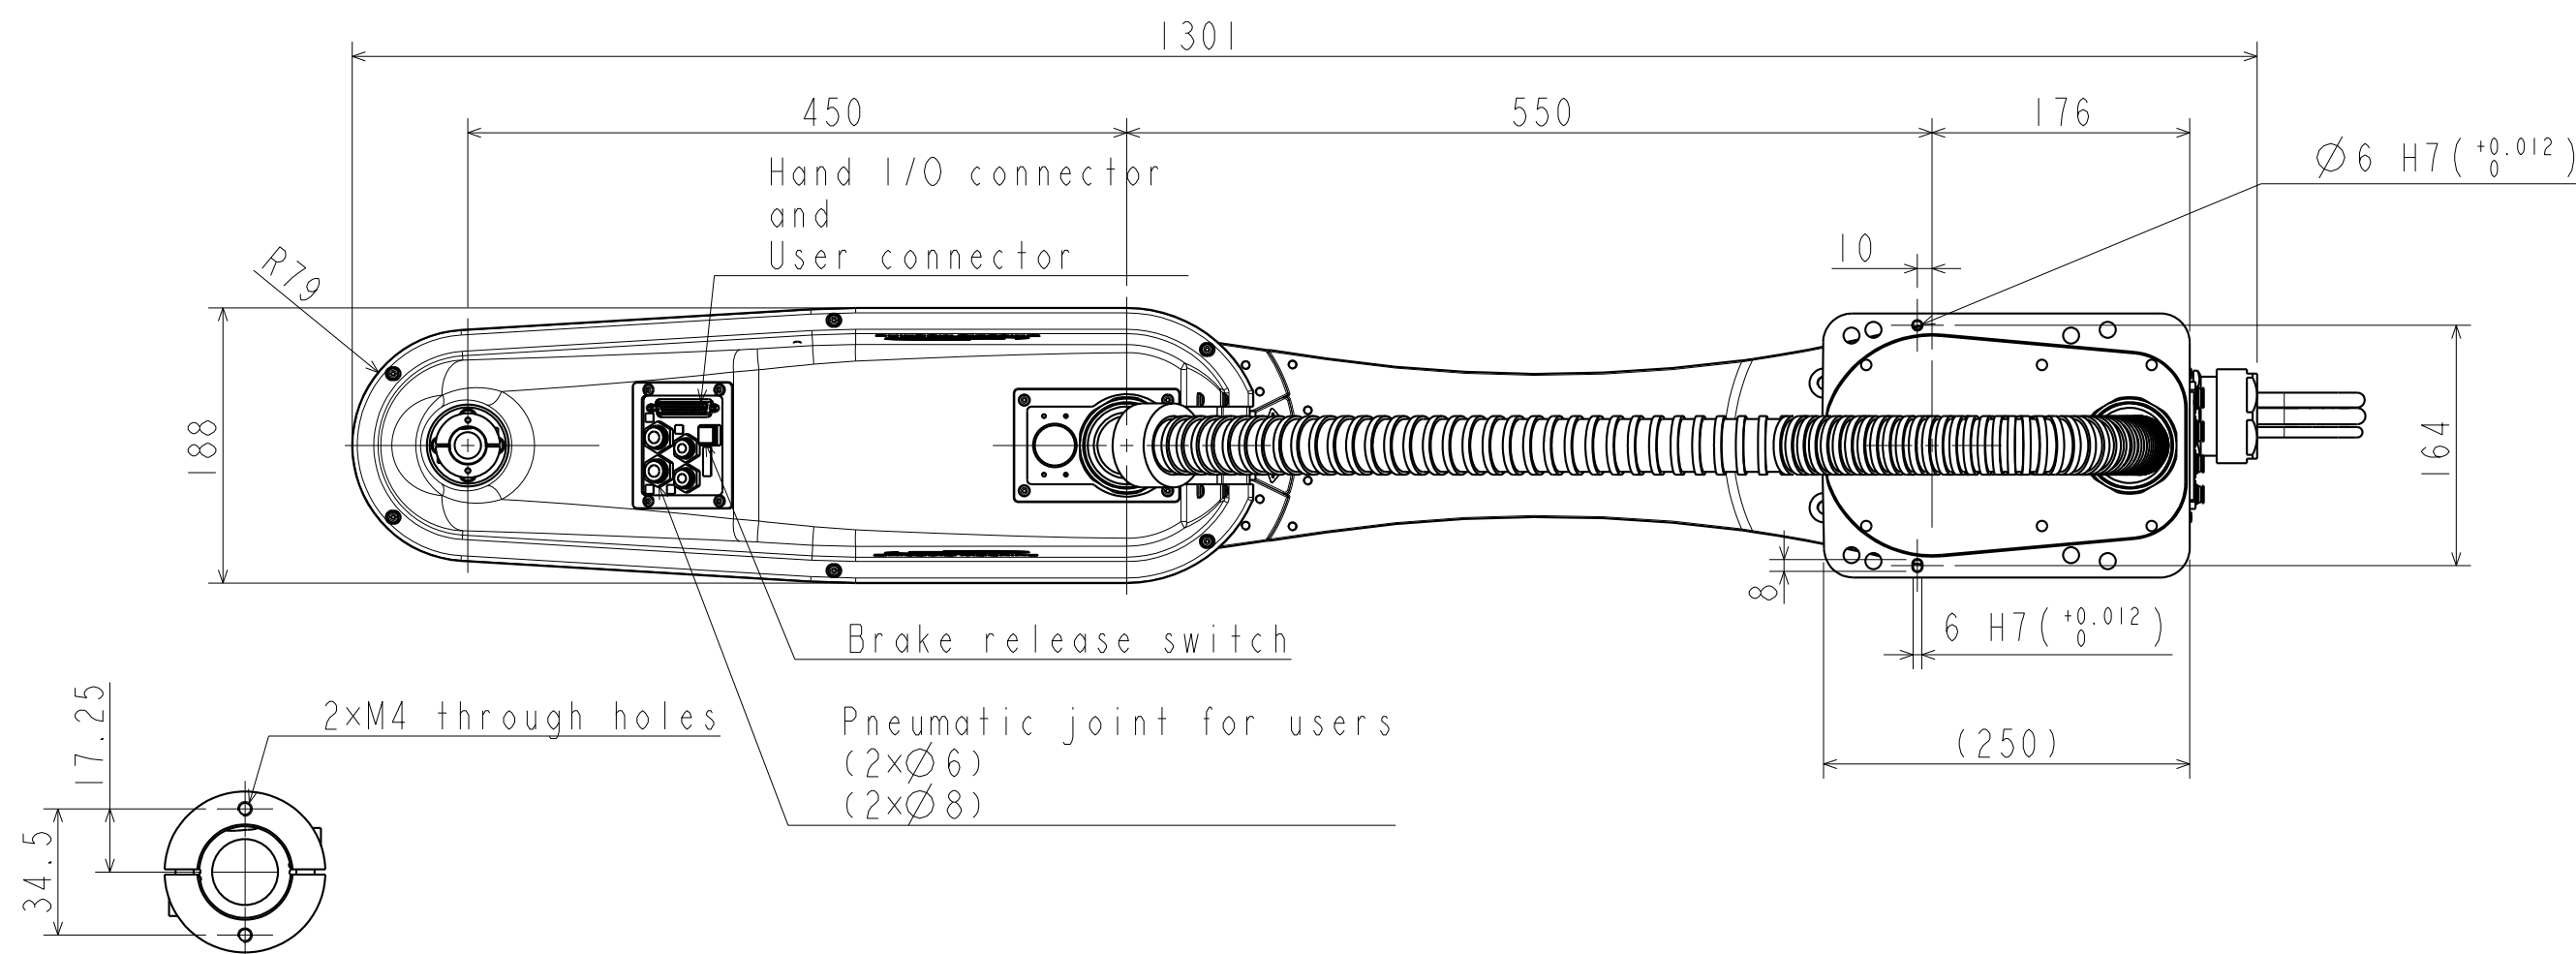

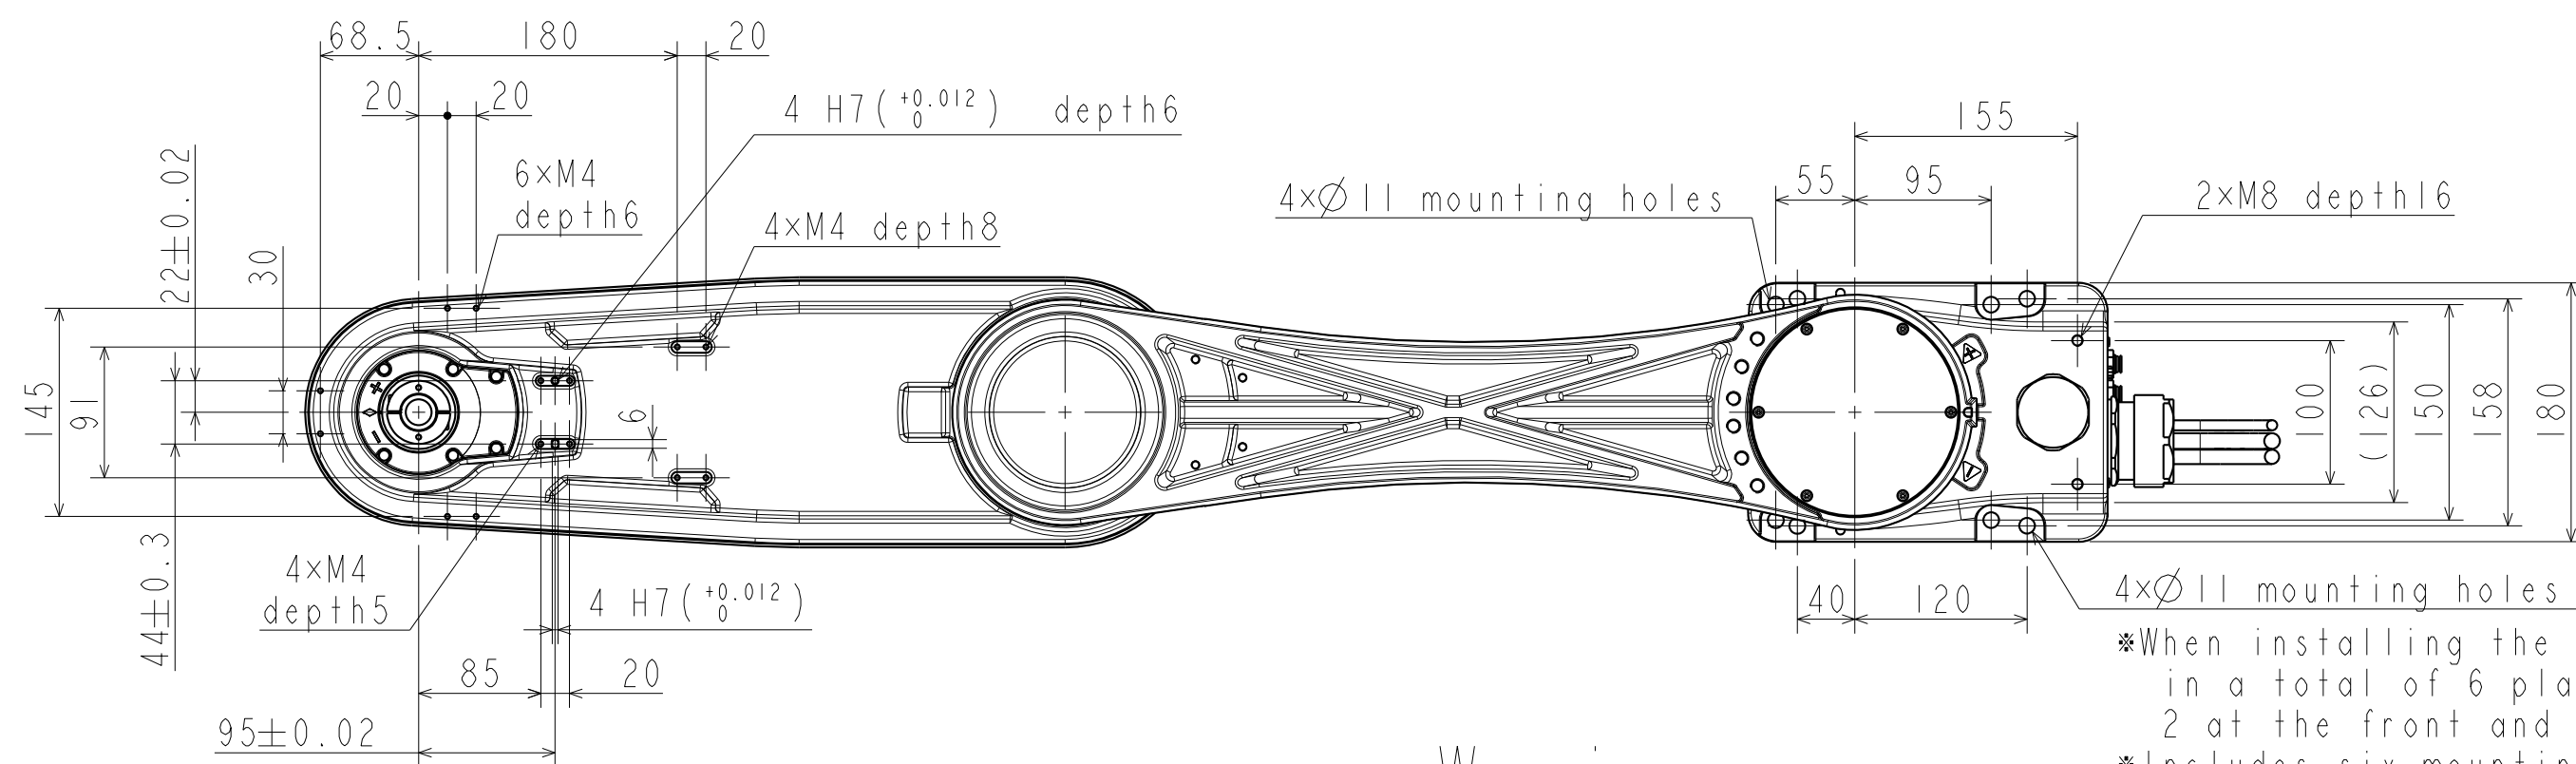


*When installing the robot, be sure to fix the robot in a total of 6 places, 2 at the front and 4 at the rear.
*Includes six mounting M10 bolts

W view

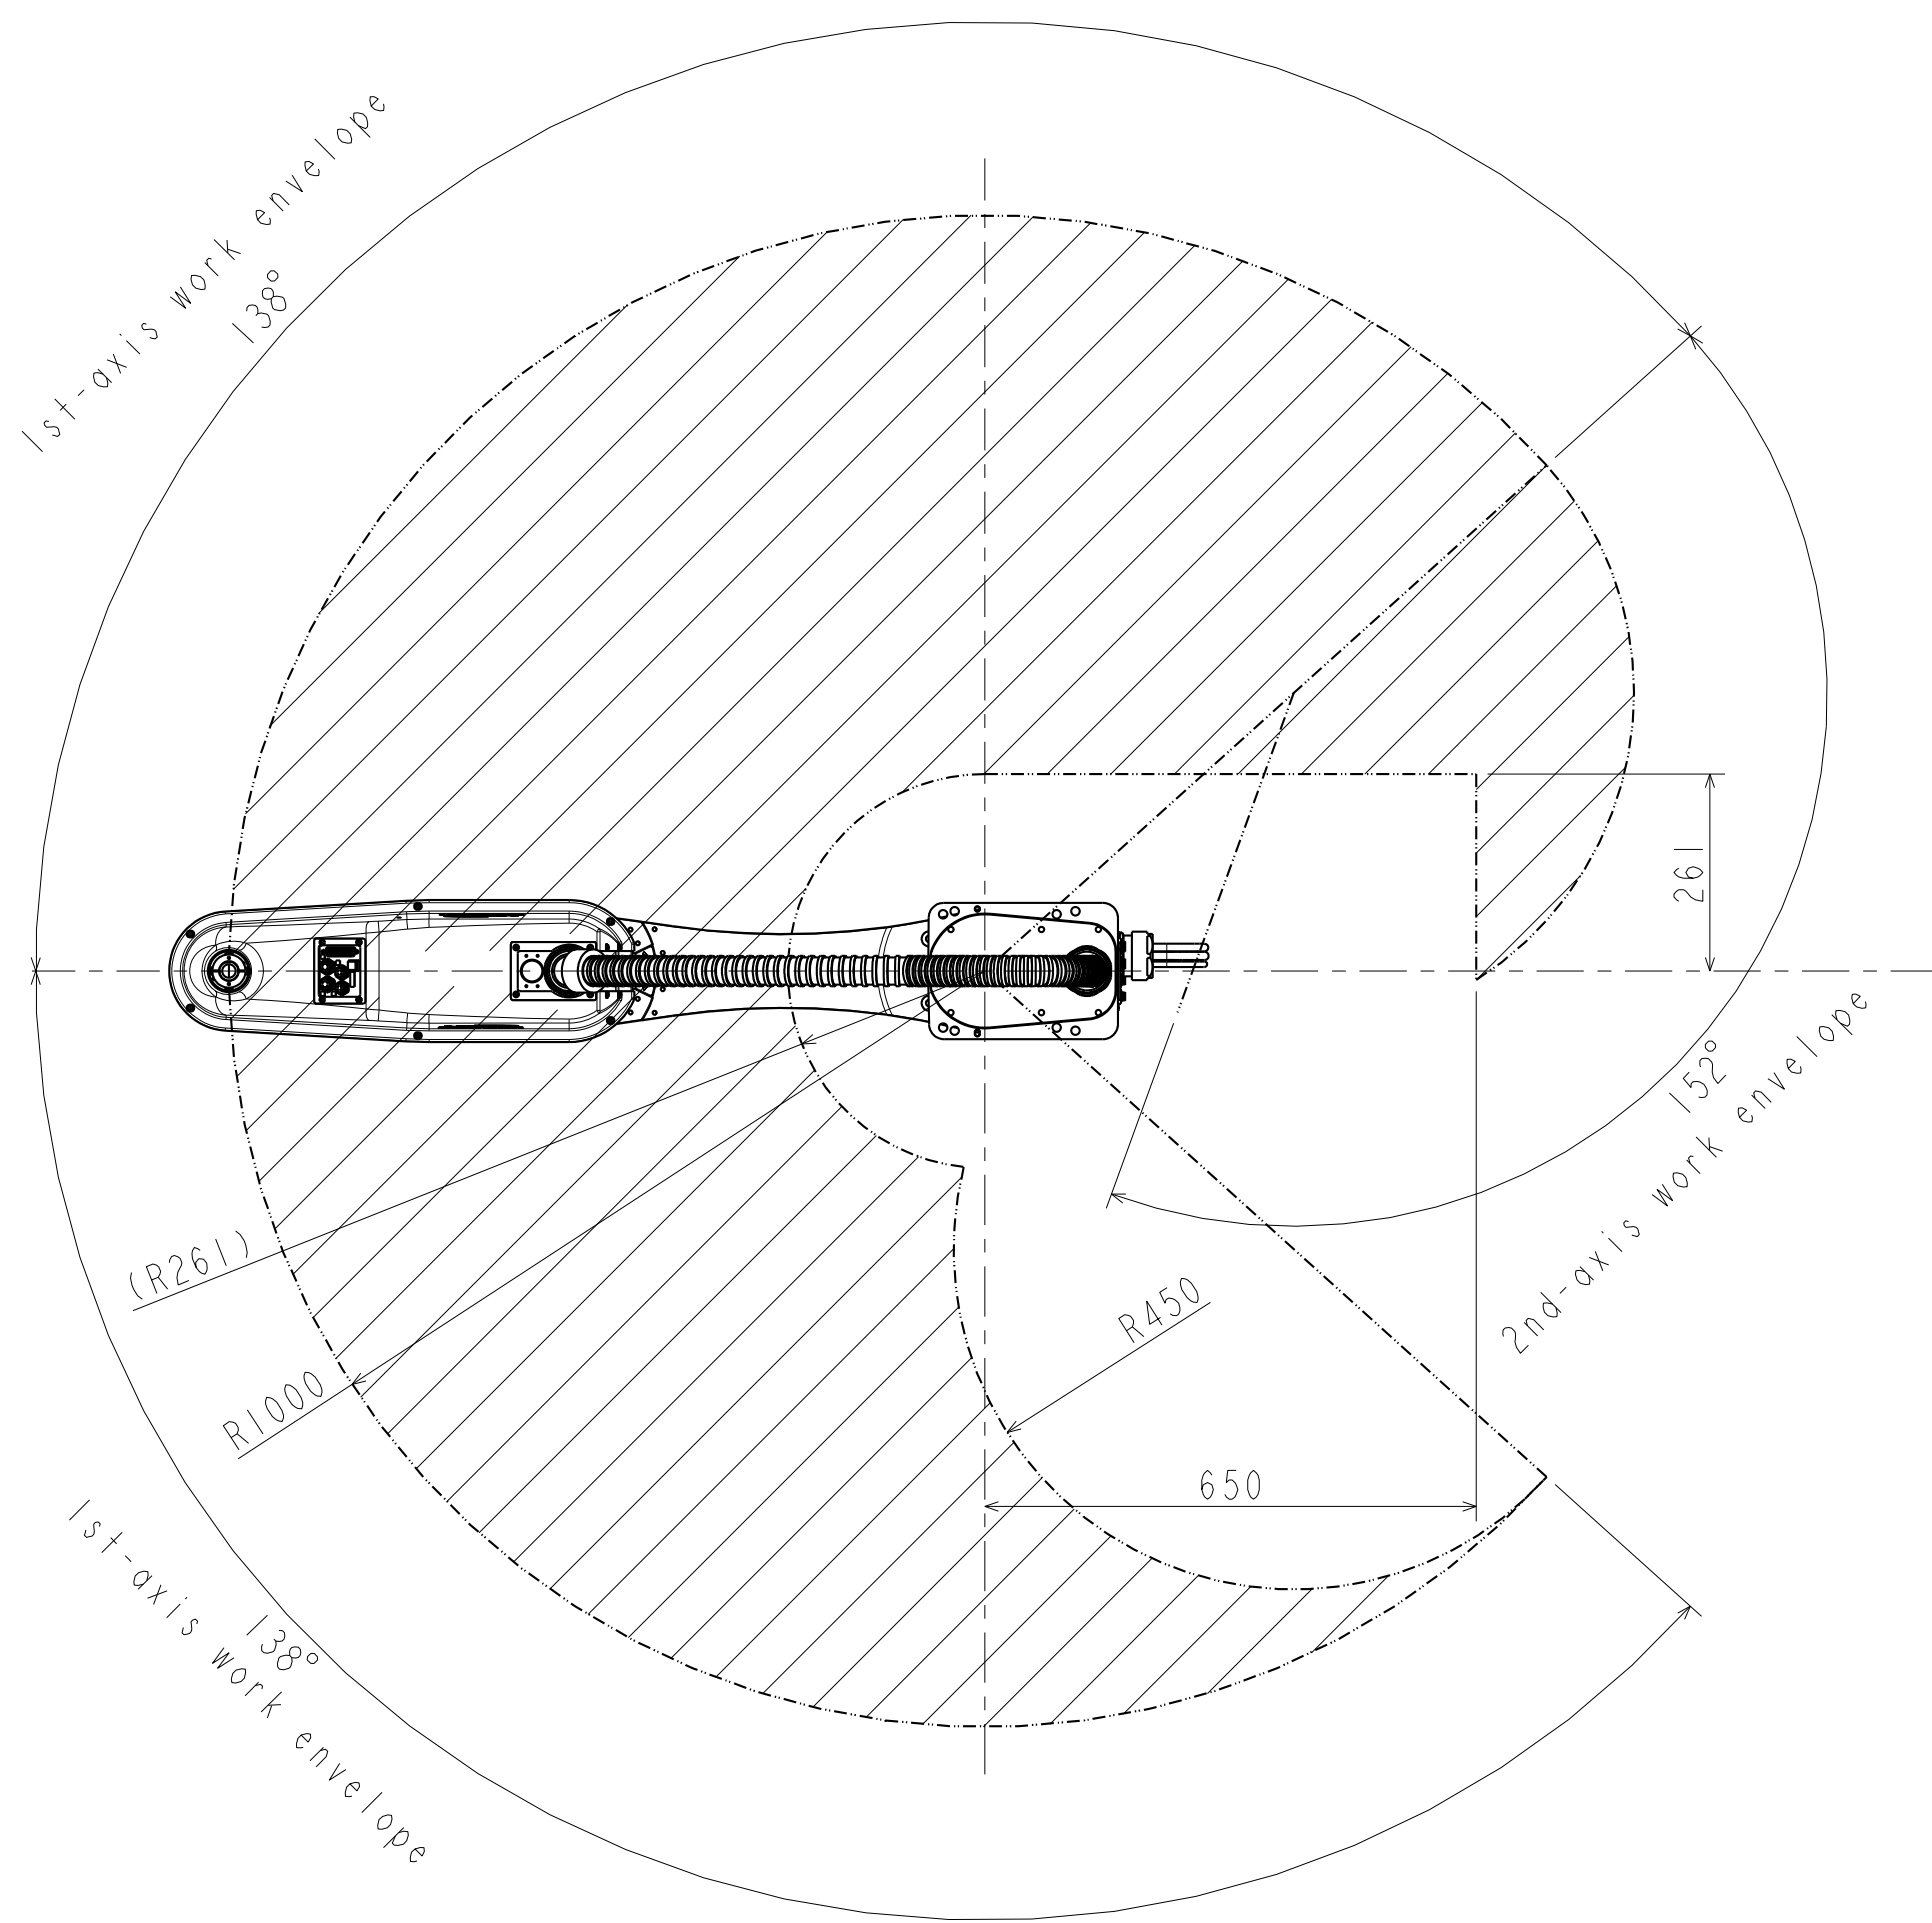

Scale 1:10

Lefty work envelope

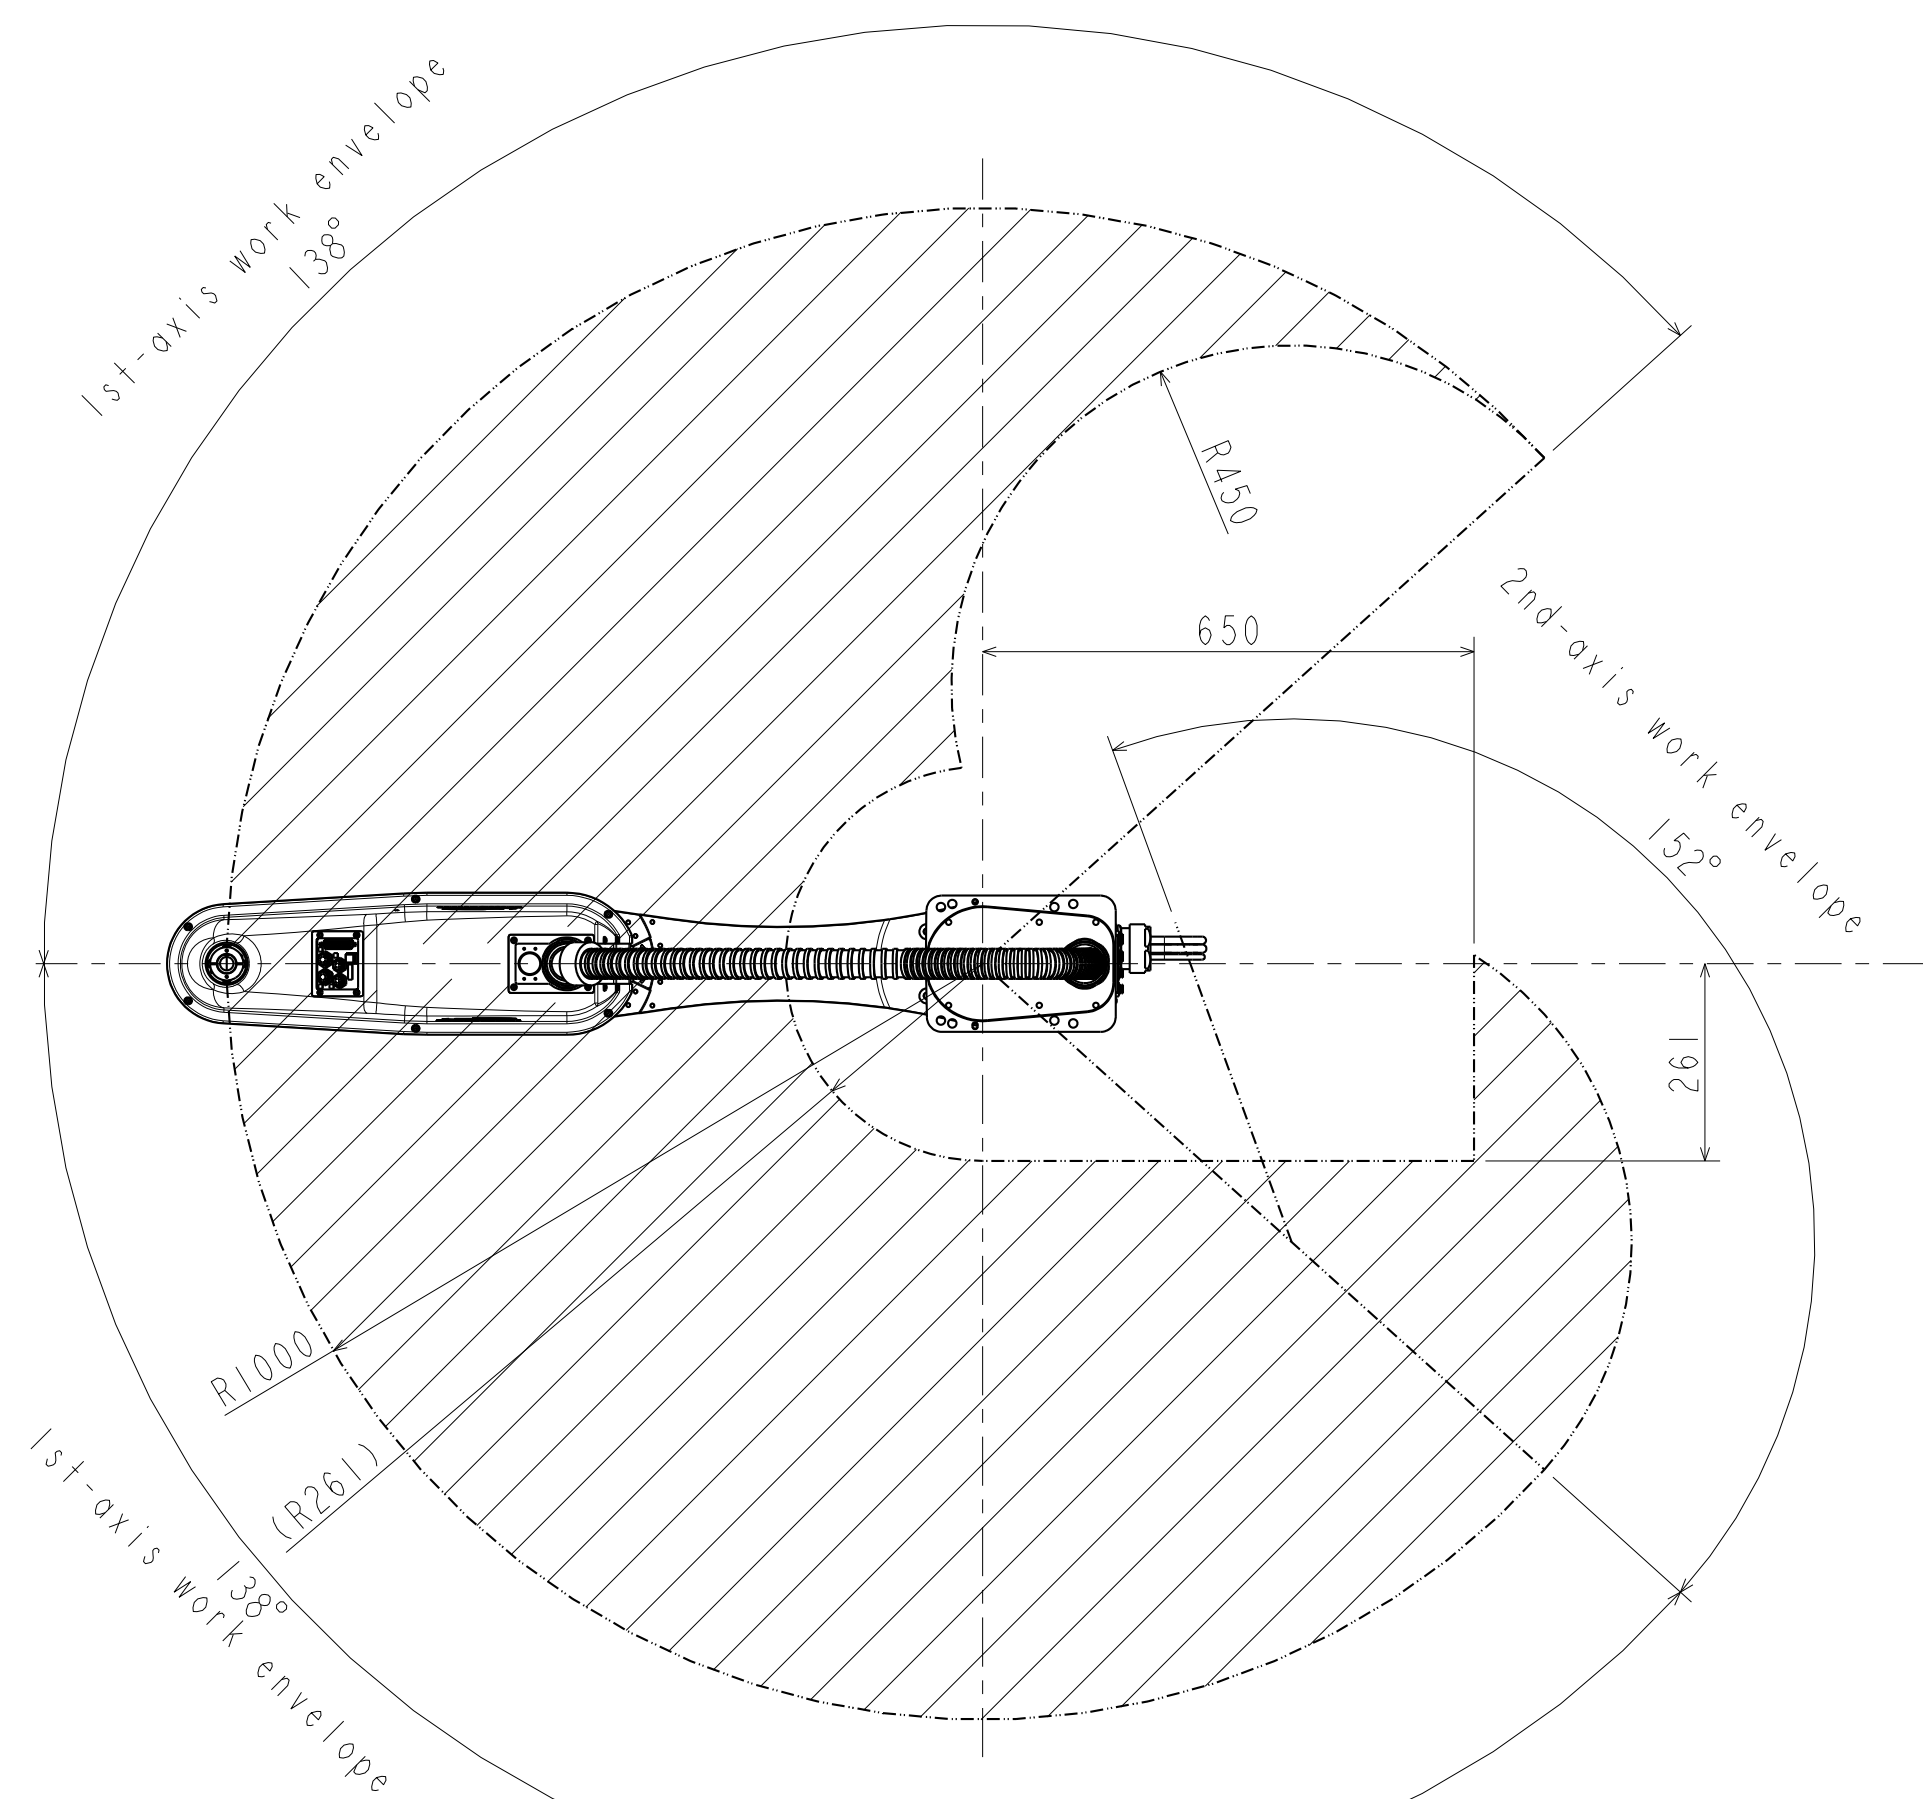

Scale 1:10

Righty work envelope